



TRICOR®

Instruction Mainboard exchange





Manual-Version

TCE_8000_CLASSIC_Mainboard_Exchange_SM_EN_190215_E005

SW-Version

This manual is valid for

Main SW: Mv3.40 and higher

Display SW: Dv3.40 and higher

Index

1.	UNSCREW THE BACK COVER.....	4
2.	UNSCREW THE 4 DISTANCE BOLTS (M7)	4
3.	UNPLUG THE MAIN BOARD CAREFULLY	5
4.	PLUG IN THE NEW MAIN BOARD	5




Unscrew the back cover

1. Unscrew the back cover




2. Unscrew the 4 distance bolts (M7)

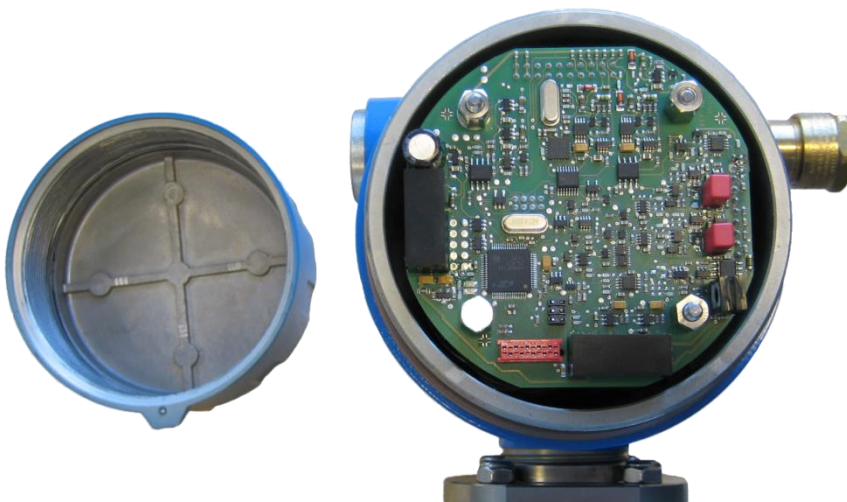




3. Unplug the main board carefully

(e.g. by means of a screw driver)

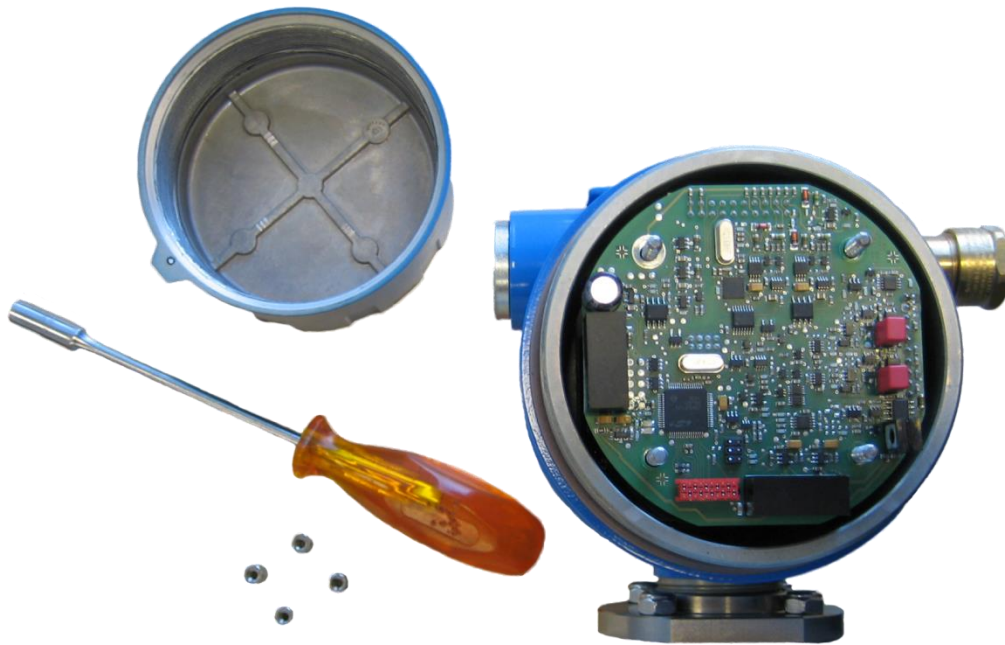

4. Plug in the new main board

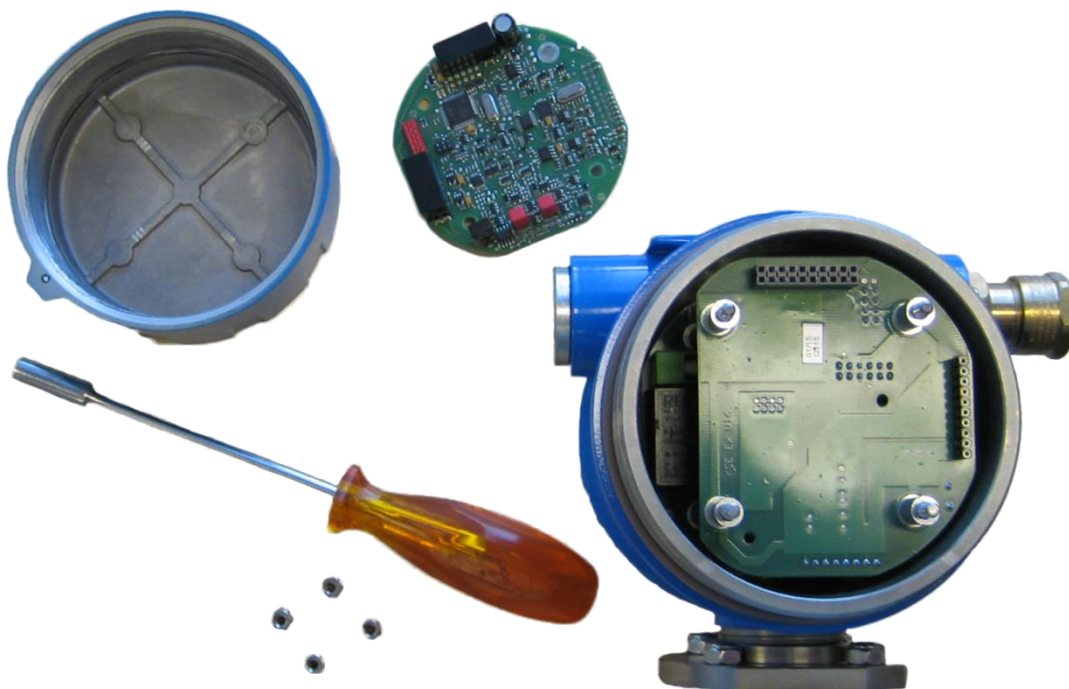



NORTH & SOUTH AMERICA

AW Lake Company
2440 W. Corporate Preserve Dr. #600
Oak Creek WI 53154 | USA
+1 414 574 4300
sales@aw-lake.com
www.aw-lake.com

ASIA PACIFIC & MIDDLE EAST

KEM Küppers Elektromechanik GmbH
73 Science Park Drive
#01-08/09 Cintech 1
Singapore 118254
+65 6347 6162
singapore@kem-kueppers.com
www.kem-kueppers.cn

EUROPE (ROW)

KEM Küppers Elektromechanik GmbH
Liebigstraße 5
85757 Karlsfeld | Germany
+49 8131 59391-100
sales@kem-kueppers.com
www.kem-kueppers.com

CHINA

KEM flow technology (Beijing) Co., Ltd.
Rm. 906, Block C, Ruipu Office Bldg, No. 15
HongJunYingNan Road
Chaoyang District, Beijing 100012 | China
+86 10 84929567
sales@kem-kueppers.com
www.kem-kueppers.cn

